




Switching Modes on SureStat Thermostats

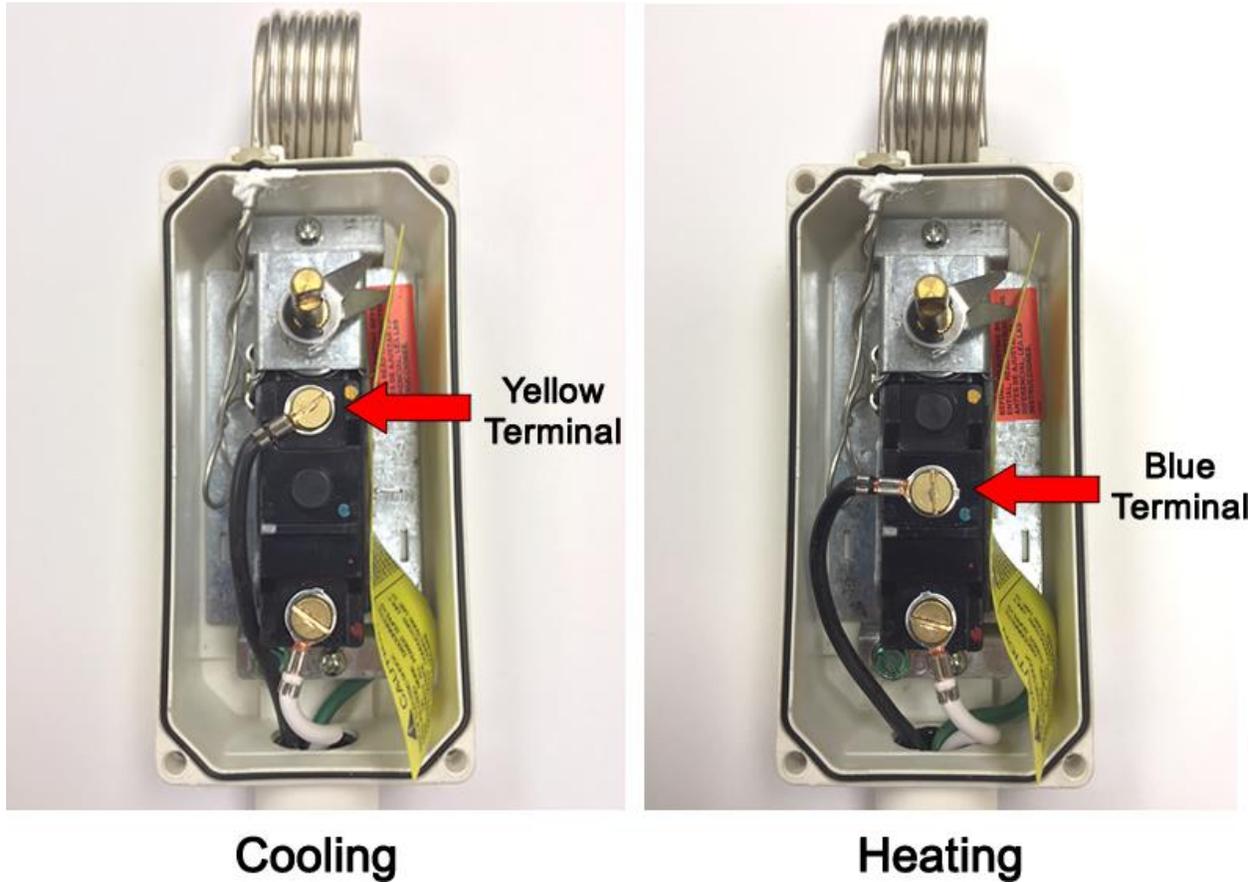

Switching Thermostat Modes (Heating & Cooling):

1. Remove the 4 screws holding the front of the thermostat to the rear section, and open it.
2. Unscrew the yellow or blue terminal (whichever one has a wire attached).
3. Remove the black rubber plug in the unused terminal.
4. Secure the terminal and wire from step 2 to the terminal you just removed the plug from.
5. Screw the front cover back onto the thermostat.
6. Test the thermostat operation to make sure it is setup for the mode you want (see below).

Checking the Thermostat Mode:

- Turn dial to 110°F. (heating mode) device should come on. (cooling mode) device should be off.
- Turn dial to 30° F. (heating mode) device should cut off. (cooling mode) device should come on.
- As the dial passes current room temperature, you should hear a faint click from the thermostat.